



- **Please Note:** A USB to Micro-USB cable is required to access and configure the Garo LS4 charge point via the Bender controller.

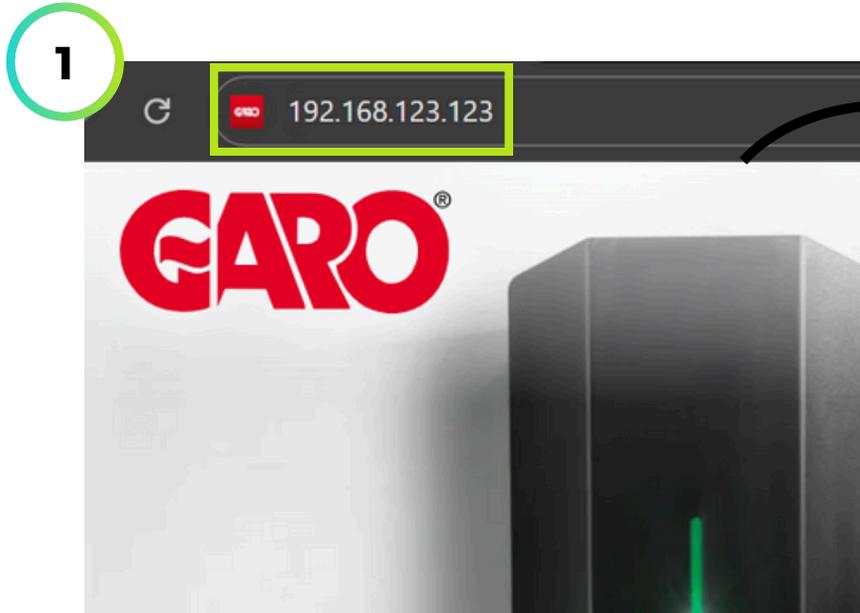

1. Connect to the Bender controller (found inside the charger) with your laptop using the USB to Micro-USB cable. Open a web browser and enter the following IP address into the search bar: 192.168.123.123

2. Enter the following credentials to log in to the Garro Configuration Interface:  
Username: operator  
Password: cherry\_zone




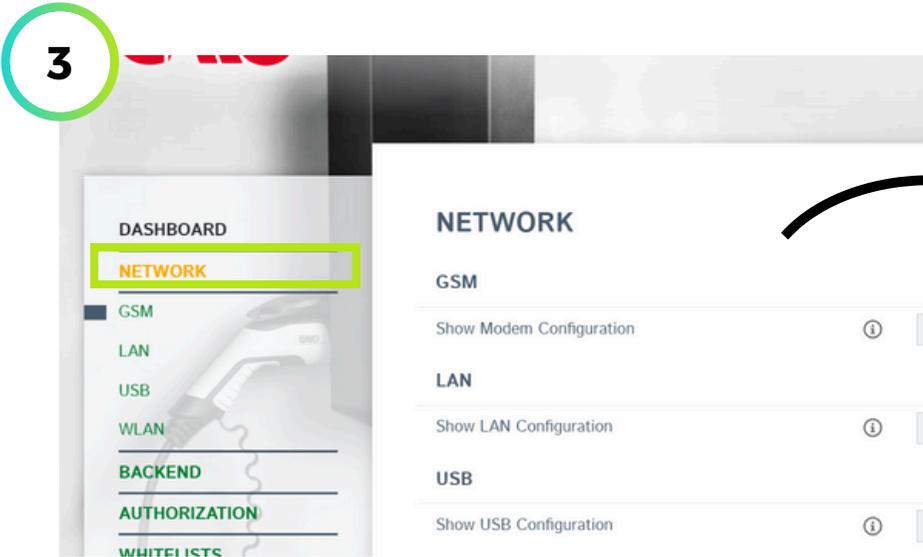


3. Select Network from the menu on the left-hand-side.

4. Select the preferred method of network connection from the left-hand-side menu and open the configuration options by selecting Show from the relevant drop-down menu. Configure the network connection as required using the necessary credentials. Save the changes and restart the charge point if prompted.

**Please note:** If connecting using a Clenergy EV supplied SIM card, use the following credentials:  
APN: eapn1.net  
Username/Password: clenergy

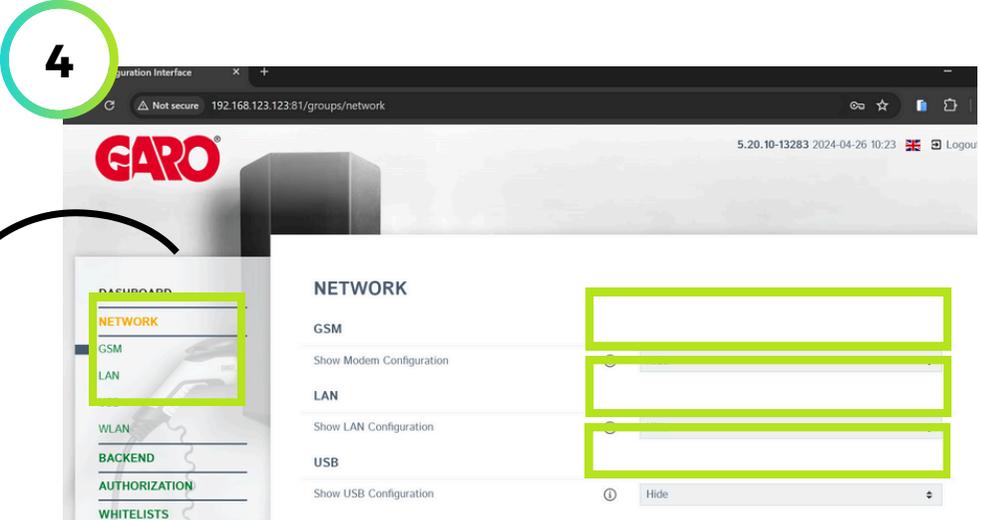


5

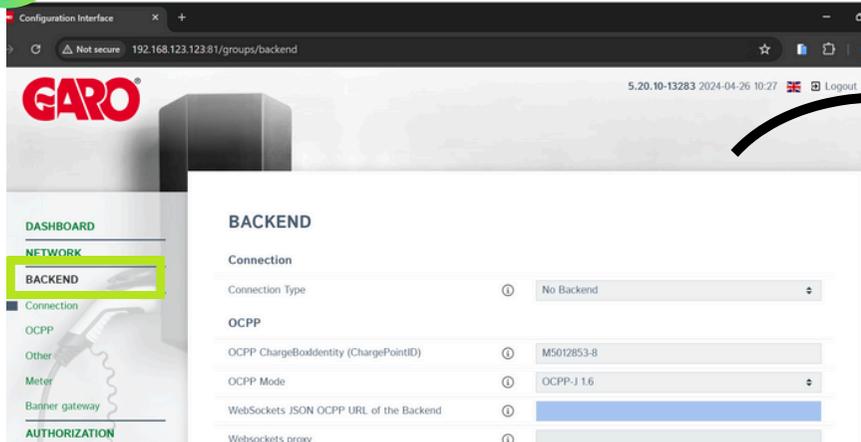


5. Select Backend from the left-hand menu.

6

6. Select the network connection method that is to be used from the Connection Type drop-down menu, then enter the following URL into the Websockets JSON OCPP URL of the Backend field: `wss://clenergy.online:8081` Save and restart the charge point if prompted.

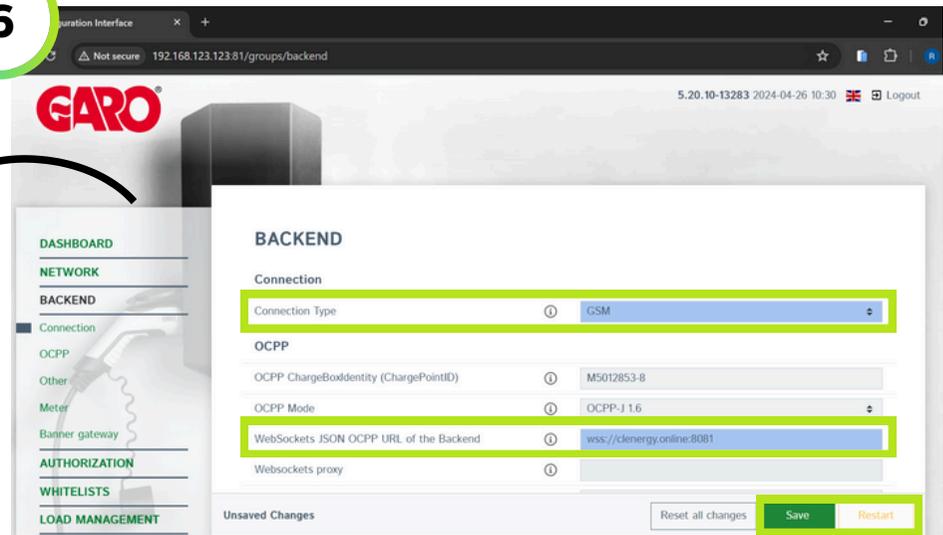

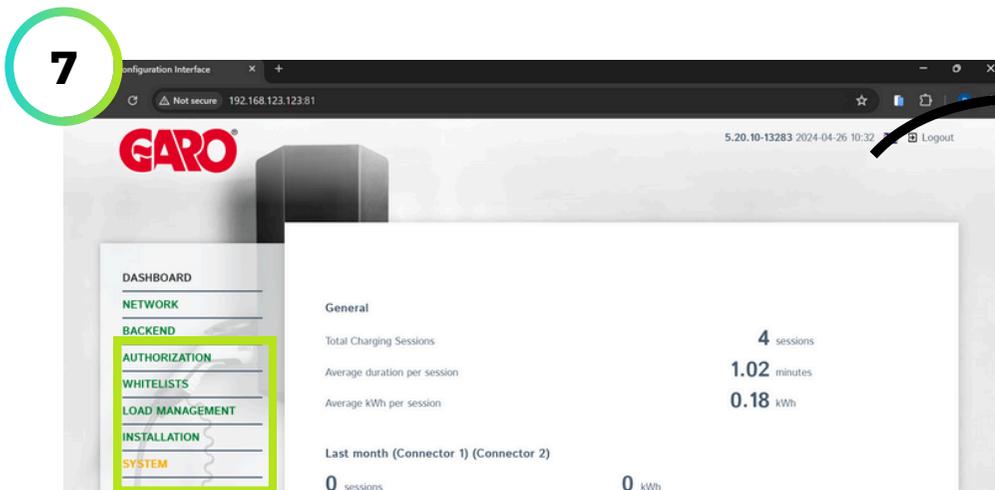

7. Use the relevant menus from the left-hand side to configure any additional settings or update the firmware if required for your installation. Save and restart the charger to complete the onboarding process.